

Aggiornato / Update: 11/2023

 Ritagliare i tagliandi ed inserirli come mostrato in figura

 Cut along the coupons and insert in the pockets as shown in the picture



 Couper le coupon et inserer dans les compartiments

 Recorta los cupones e insértalos como se muestra en la figura

 Schneiden Sie aus und setzen den folgenden Abschnitt wie im Figur ein



205-14	225/65-15	235/50-16	235/45-17
205/80-14	235/60-15	245/45-16	225/45-18
215-14	600-15	205/60-17	235/40-18
215/70-14	890-15	215/50-17	235/35-19
195-15	215/60-16	Kleber Krisalp	
195/80-15	Continental / Michelin		215/55-17
215/70-15	225/55-16	225/50-17	

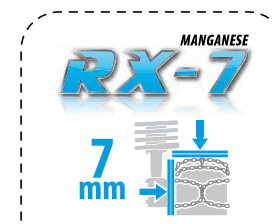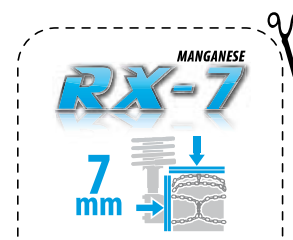

MISURA • SIZE TAILLE • GRÖSSE		MISURA • SIZE TAILLE • GRÖSSE	
10		10	
205-14	225/55-16	205-14	225/55-16
205/80-14	235/50-16	205/80-14	235/50-16
215-14	245/45-16	215-14	245/45-16
215/70-14	205/60-17	215/70-14	205/60-17
195-15	215/50-17	195-15	215/50-17
195/80-15	Kleber Krisalp	195/80-15	Kleber Krisalp
215/70-15	215/55-17	215/70-15	215/55-17
225/65-15	225/50-17	225/65-15	225/50-17
235/60-15	235/45-17	235/60-15	235/45-17
600-15	225/45-18	600-15	225/45-18
890-15	235/40-18	890-15	235/40-18
215/60-16	235/35-19	215/60-16	235/35-19
Continental / Michelin		Continental / Michelin	