



Art. **N11065**

**U-5**

**SET x2**



- I** CINGHIE FERMASCALA
- GB** LADDER HOLDER STRAPS

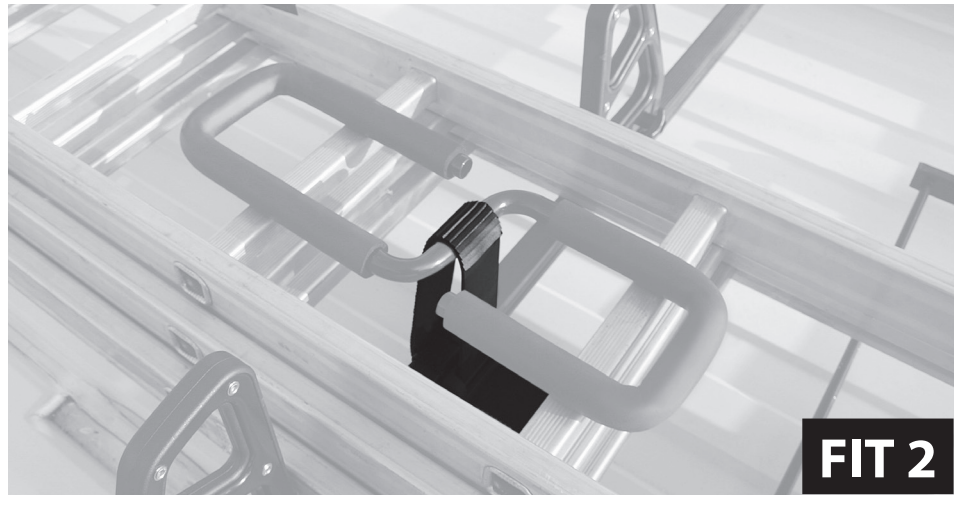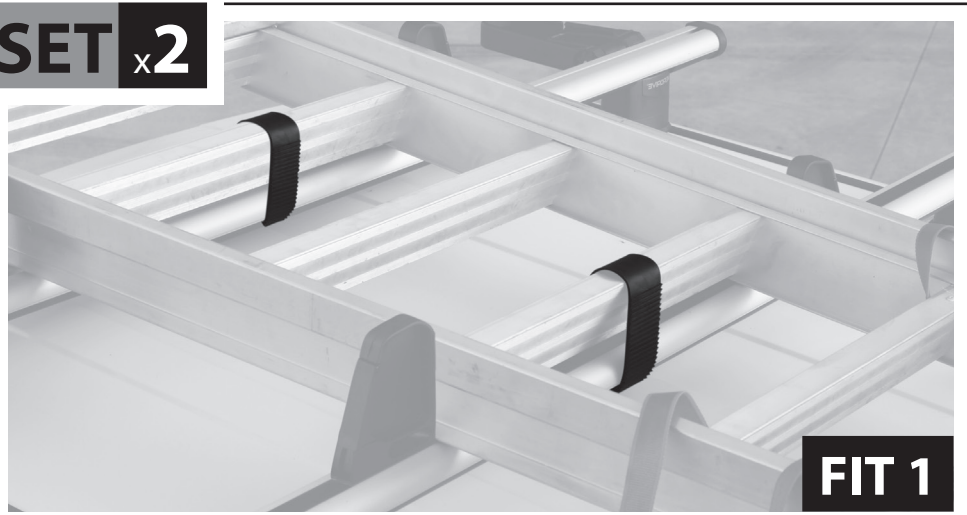

- I** ISTRUZIONI DI MONTAGGIO
- GB** FITTING INSTRUCTIONS
- D** MONTAGEANLEITUNG
- F** INSTRUCTIONS DE MONTAGE
- E** ISTRUCCIONES DE MONTAJE
- P** INSTRUÇÕES DE MONTAGEM
- NL** MONTAGE-INSTRUCTIES
- S** MONTERINGSANVISNING
- FIN** ASENNUSOHJE
- EST** PAIGALDUSJUHEND
- LAT** STIPRINĀŠANAS INSTRUKCIJA
- LT** PRITVIRTINIMO INSTRUKCIJOS
- PL** INSTRUKCJA MONTAŻU
- RUS** Инструкции по установке
- CZ** NÁVOD NA MONTÁŽ
- SK** NÁVOD NA MONTÁŽ
- SLO** NAVODILA ZA PRITRJEVANJE
- HR** UPUTA ZA SASTAVLJANJE
- H** A FELSZERELÉS MÓDJA
- GR** Οδηγίες συναρμολόγησης
- TR** MONTAJ TALIMATLARL
- BG** ИНСТРУКЦИИ ЗА МОНТАЖ
- SRB** UPUTSTVA ZA MONTAŽU


- I** ADATTA PER
- GB** SUITABLE FOR
- F** INDIQUÉ POUR
- D** GEEIGNET FÜR
- E** ADECUADA PARA



**NORDDRIVE**  
**KARGO SERIES**



**KARGO**

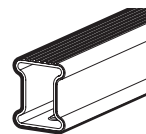


ACCIAIO / STEEL

- I** BARRE KARGO
- GB** KARGO BARS
- F** BARRES KARGO
- D** DACH-LASTENTRÄGER KARGO
- E** BARRES KARGO



**KARGO-PLUS**

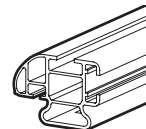


ALUMINIO / ALUMINIUM

- I** BARRE KARGO-PLUS
- GB** KARGO-PLUS BARS
- F** BARRES KARGO-PLUS
- D** DACH-LASTENTRÄGER KARGO-PLUS
- E** BARRES KARGO-PLUS



**KRS-7**


**KRS-12**

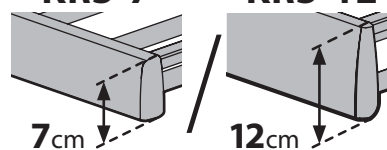

- I** CESTE PORTATUTTO KRS-7 / KRS-12
- GB** KRS-7 / KRS-12 VAN ROOF RACKS
- F** GALERIE KRS-7 / KRS-12
- D** DACHKÖRBBEN KRS-7 / KRS-12
- E** BACAS KRS-7 / KRS-12

**NORDDRIVE**<sup>®</sup>  
TRANSPORT SOLUTIONS


CONTENUTO • CONTENT • CONTENU • INHALT • CONTENIDO

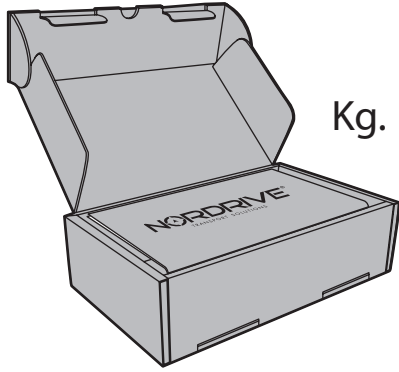

Kg. **0,5**

**NORDRIVE**<sup>®</sup>  
TRANSPORT SOLUTIONS


**x2**

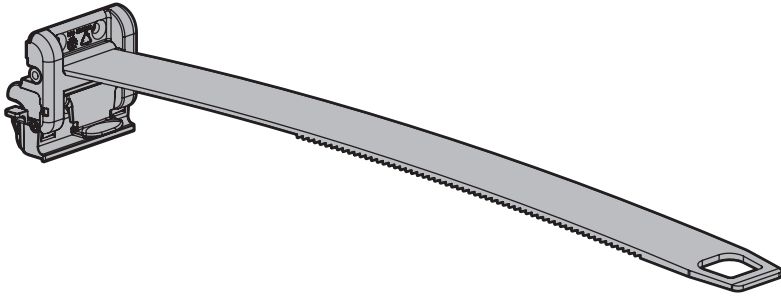

**A**


43GR0002

**x1**




72FE0008

**x4**

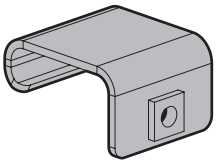


40FE014

**x2**

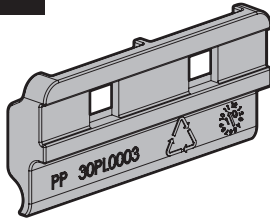


30PL0003

**x2**


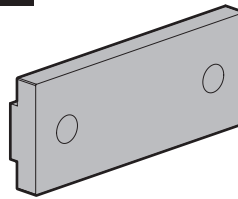


78FE007

**x4**







60TS6012

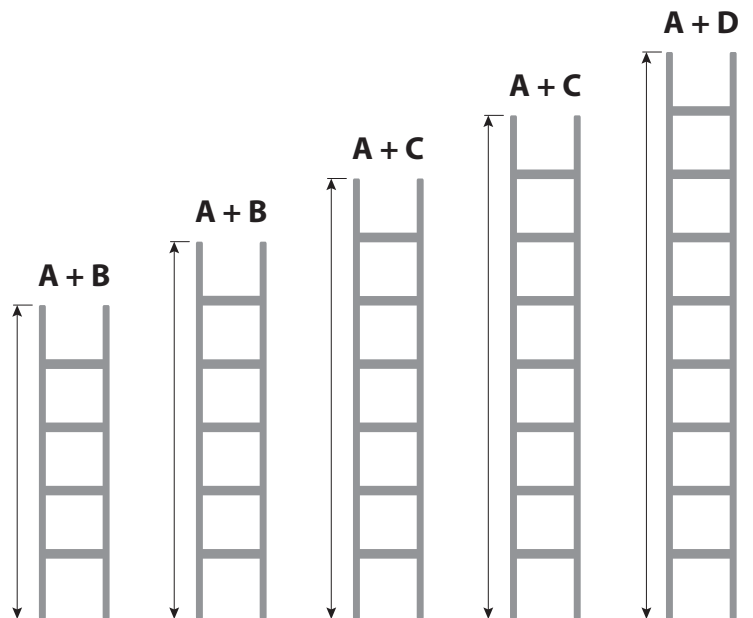
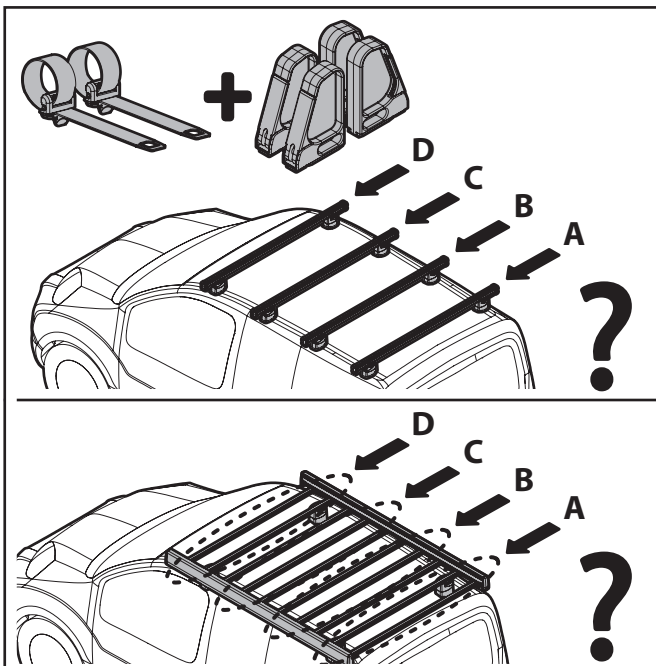






# ATTENZIONE WARNING

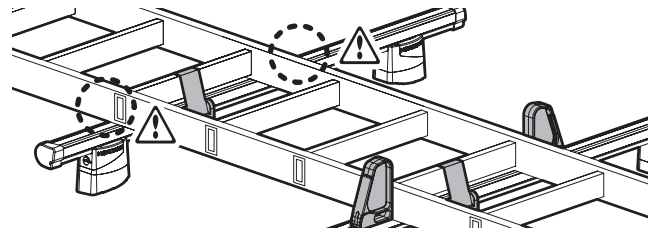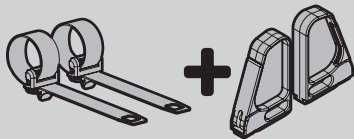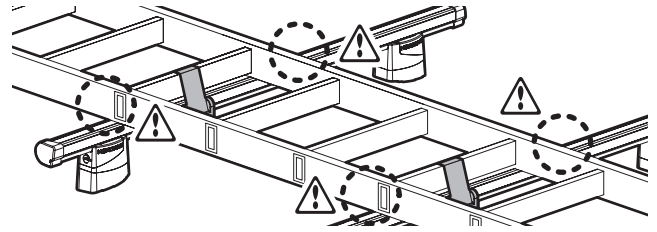

FIT 1

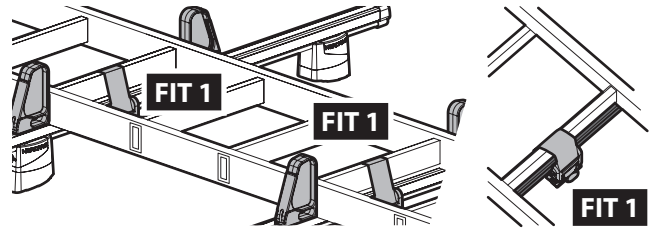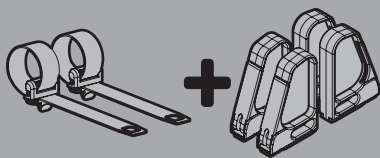


FIT 1  
FIT 2

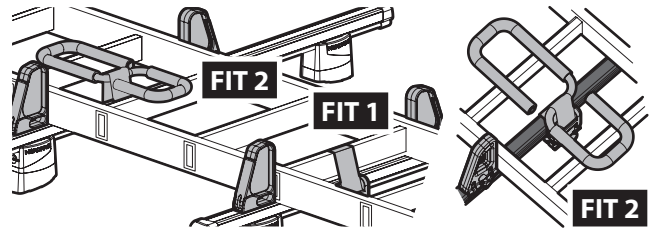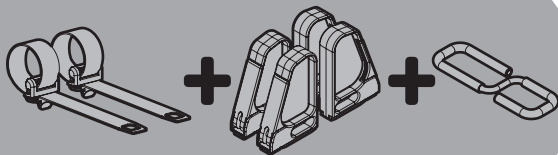

## ISTRUZIONI DI MONTAGGIO • FITTING INSTRUCTIONS • INSTRUCTIONS DE MONTAGE MONTAGEANWEISUNG • INSTRUCCIONES DE MONTAJE

KARGO

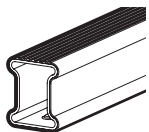


ACCIAIO / STEEL



pag.4

KARGO-PLUS

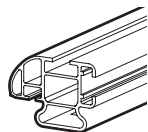


ALLUMINIO / ALUMINIUM




pag.6

KRS-7



7cm

KRS-12




12cm



pag.8


## ISTRUZIONI DI UTILIZZO • USER'S GUIDE • INSTRUCTIONS D'UTILISATION BEDIENUNGSANLEITUNG • INSTRUCCIONES DE UTILIZACIÓN

- ① TENDERE LA CINGHIA
- GB TIGHTEN THE BELT
- F SERRER LA CEINTURE
- D ZIEHEN SIE DEN GURT
- E AJUSTE LA CORREA

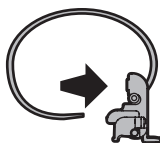

pag.10

- ① ALLENTARE LA CINGHIA
- GB LOOSEN THE BELT
- F DESERRER LA CEINTURE
- D LOCKERN SIE DEN GURT
- E AFLOJAR LA CORREA


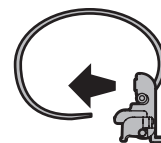


pag.12

**ISTRUZIONI DI MONTAGGIO • FITTING INSTRUCTIONS • INSTRUCTIONS DE MONTAGE  
MONTAGEANWEISUNG • INSTRUCCIONES DE MONTAJE**

**A**


- ① MONTAGGIO DIRETTO SULLE **BARRE KARGO ACCIAIO**
- ② FITTING ON **KARGO STEEL BARS**
- ③ MONTAJE DIRECTO EN **BARRAS DE ACERO DE KARGO**
- ④ DIREKTE MONTAGE AUF DEN **KARGO STAHL-DACHTRÄGERN**
- ⑤ MONTAGE DIRECT SUR LES **BARRES ACIER KARGO**

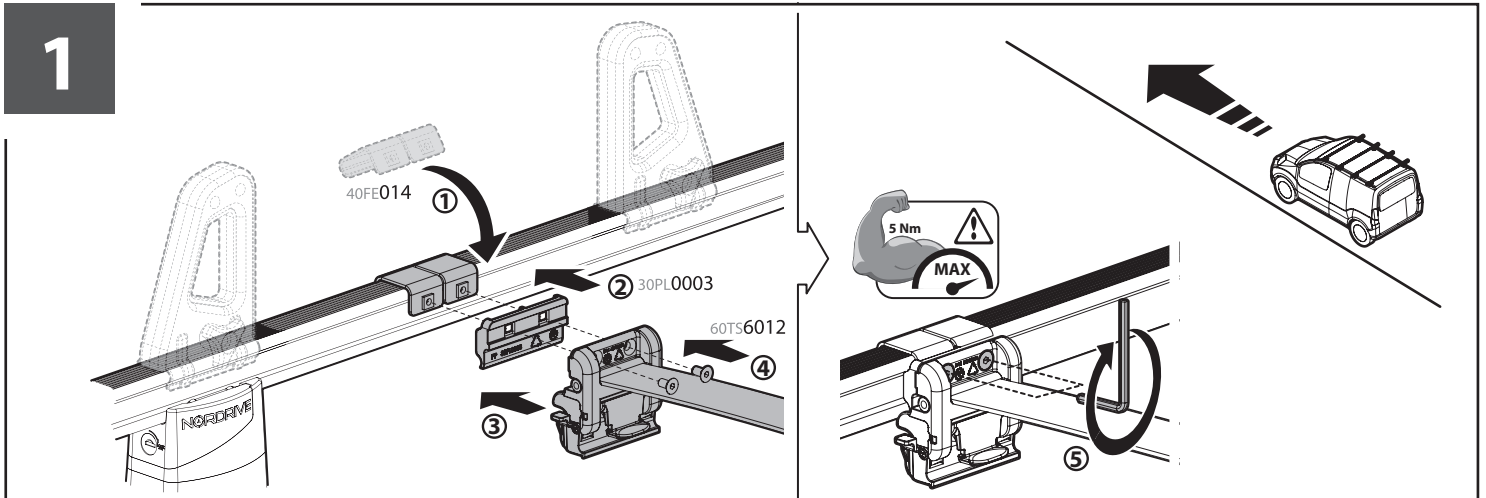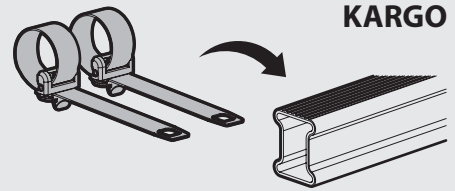

**FIT 1**

**OBBLIGATORIO - COMPULSORY  
OBLIGATOIRE - VORGESCHRIEBEN - OBLIGATORIO**


**LOAD STOP**

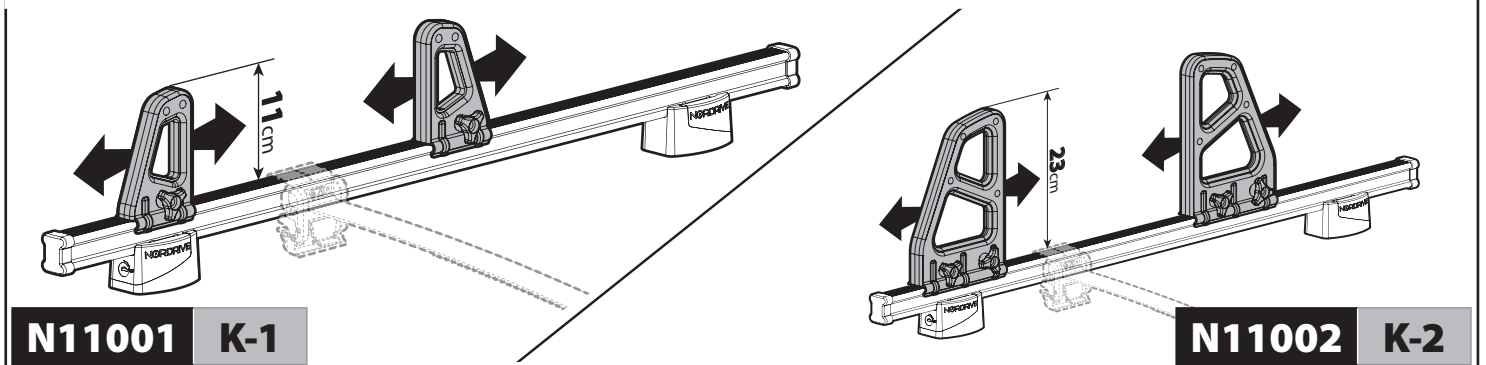

**FIT 2**





**OBBLIGATORIO - COMPULSORY  
OBLIGATOIRE - VORGESCHRIEBEN - OBLIGATORIO**

**LADDER STEP  
ADAPTER**

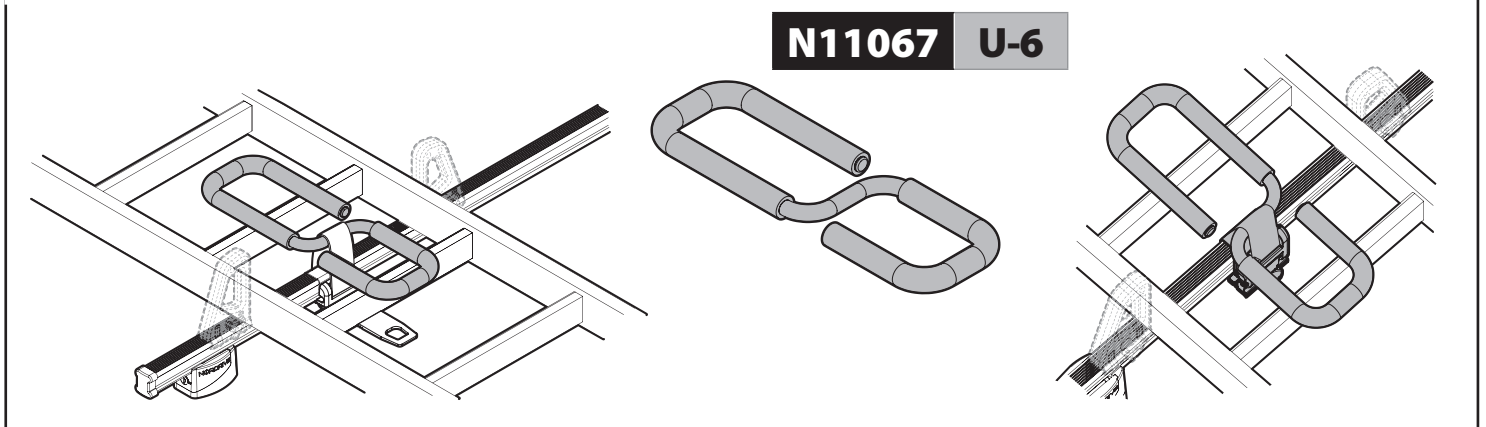

# B

- ① MONTAGGIO DIRETTO SULLE **BARRE KARGO-PLUS ALLUMINIO**
- GB FITTING ON **KARGO-PLUS ALUMINIUM BARS**
- F MONTAJE DIRECTO EN LAS **BARRAS DE ALUMINIO KARGO-PLUS**
- D DIREKTE MONTAGE AUF DEN **KARGO-PLUS ALUMINIUM-DACHTRÄGERN**
- E MONTAGE DIRECT SUR LES **BARRES ALUMINIUM KARGO-PLUS**

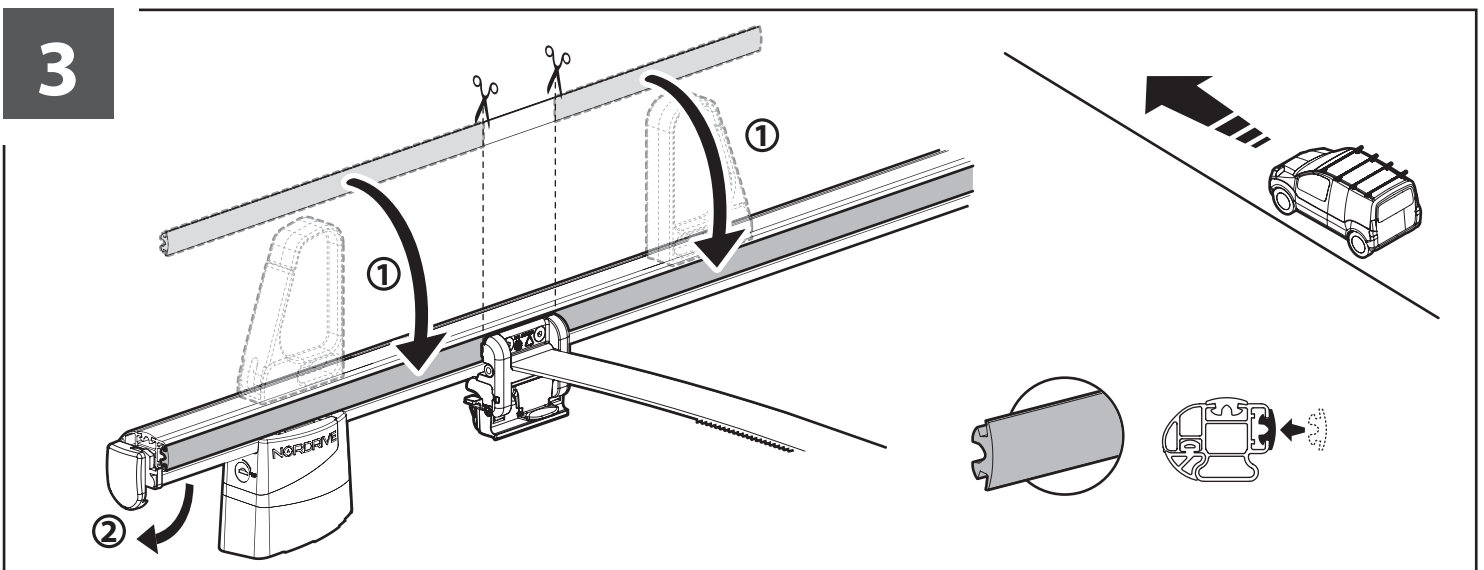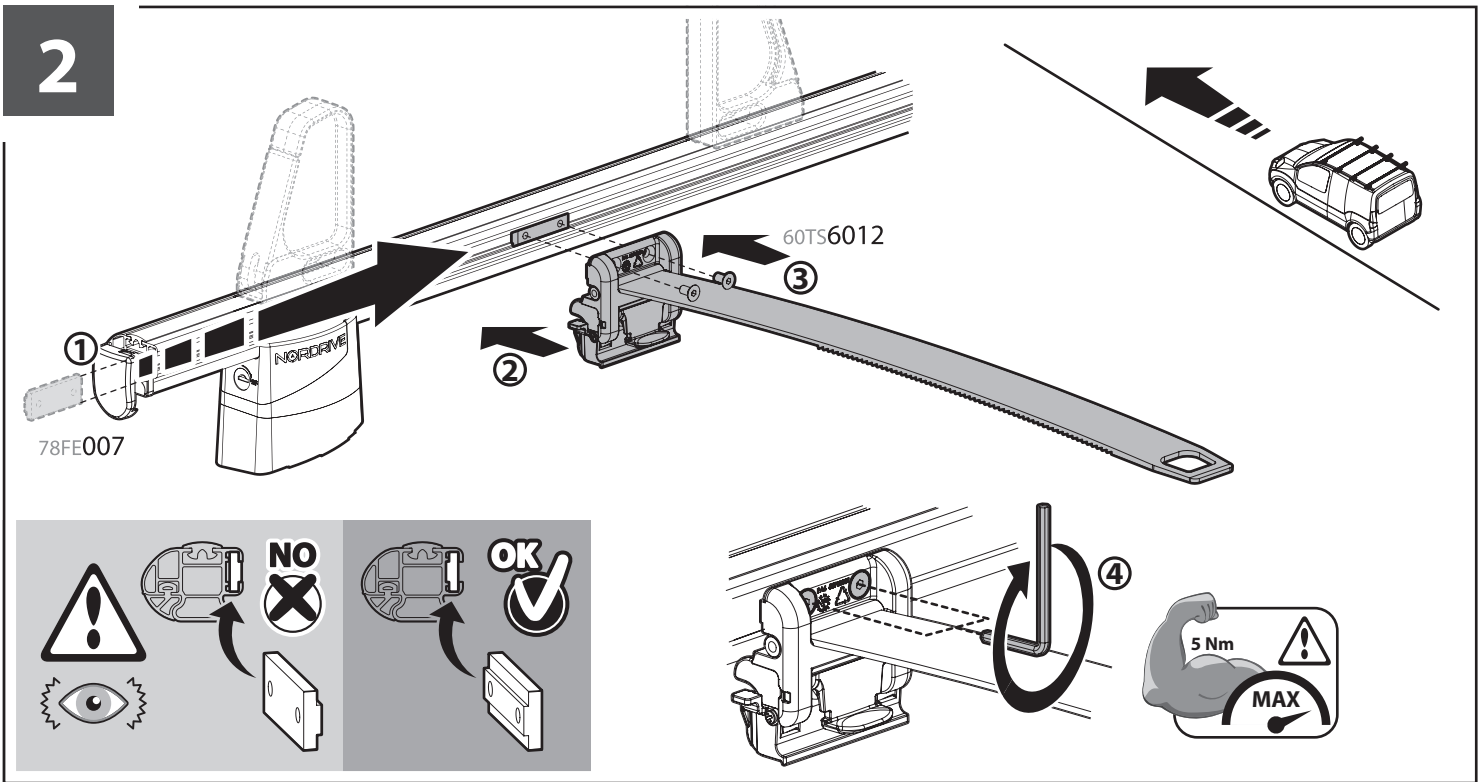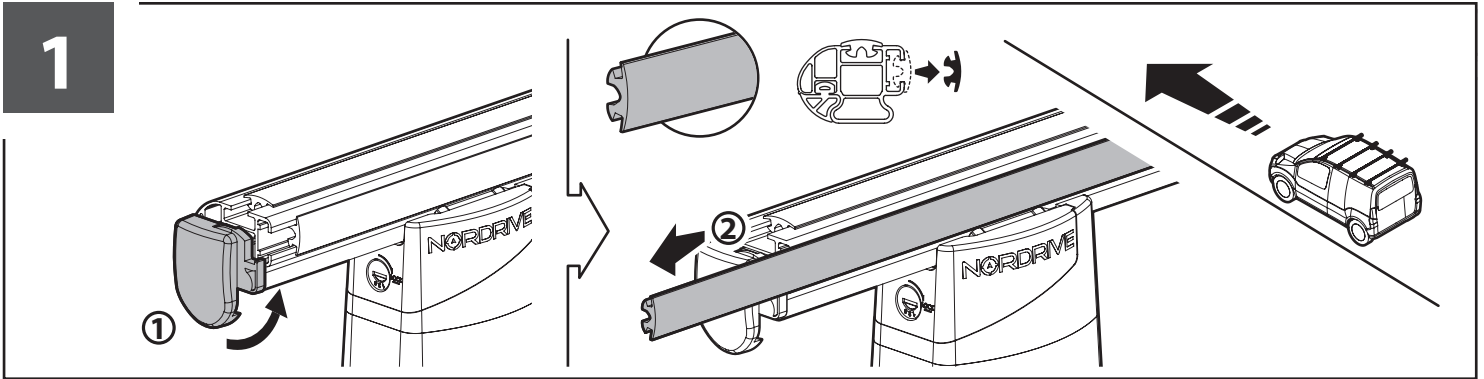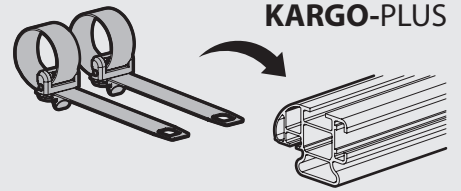




**FIT 1**

**OBBLIGATORIO - COMPULSORY**  
OBLIGATOIRE - VORGESCHRIEBEN - OBLIGATORIO

**LOAD STOP**

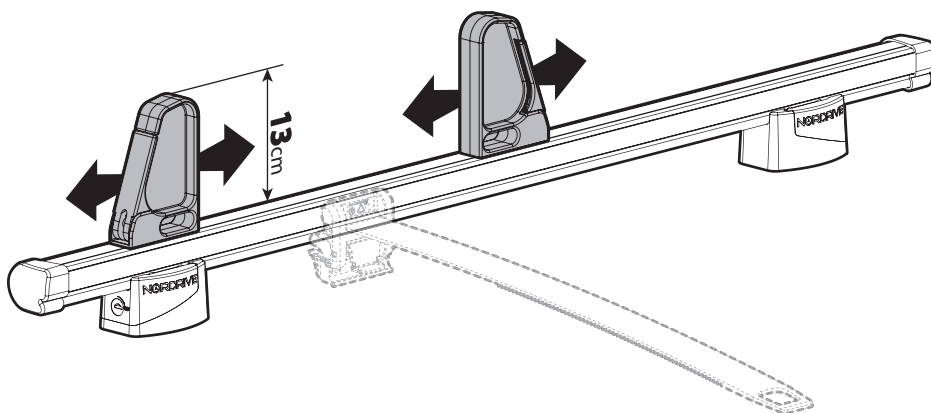


**N11031 KP-1**



**FIT 2**



**OBBLIGATORIO - COMPULSORY**  
OBLIGATOIRE - VORGESCHRIEBEN - OBLIGATORIO

**LADDER STEP  
ADAPTER**

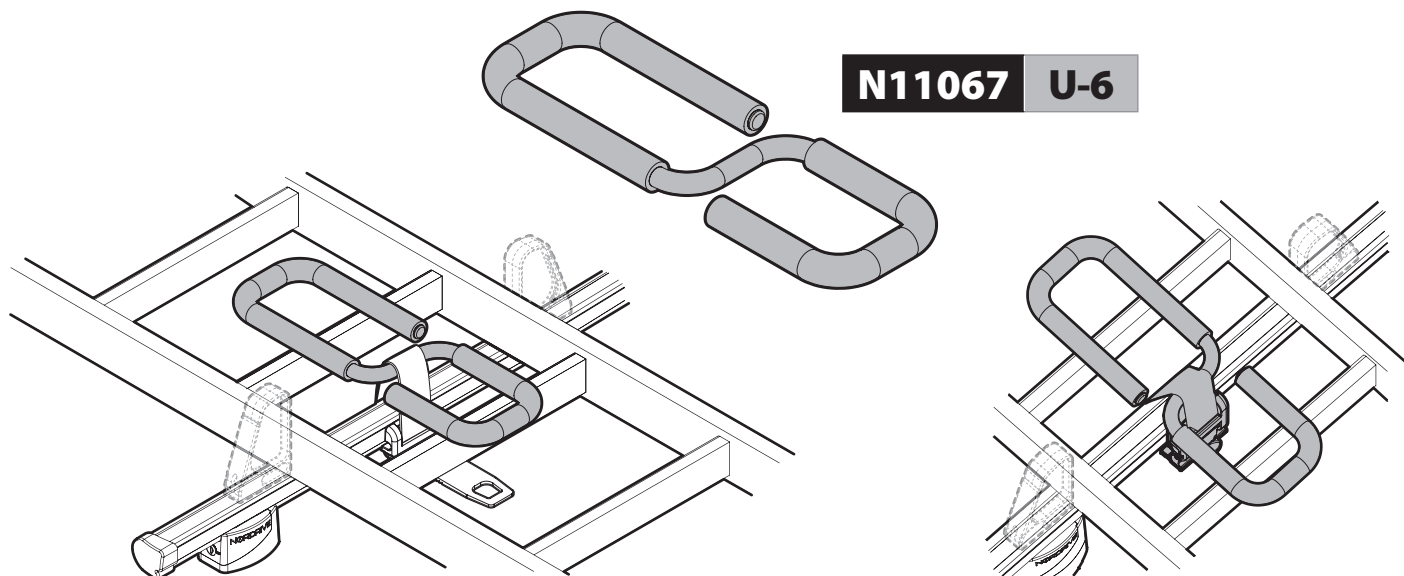

**N11067 U-6**


- C**
- ① MONTAGGIO DIRETTO SULLE **CESTE PORTATUTTO KRS-7 / KRS-12**
  - GB FITTING ON **KRS-7 / KRS-12 VAN ROOF RACKS**
  - F MONTAJE DIRECTO EN LAS **GALERIE KRS-7 / KRS-12**
  - D DIREKTE MONTAGE AUF DEN **DACHKÖRBE N KRS-7 / KRS-12**
  - E MONTAGE DIRECT SUR LES BARRES **BACAS KRS-7 / KRS-12**

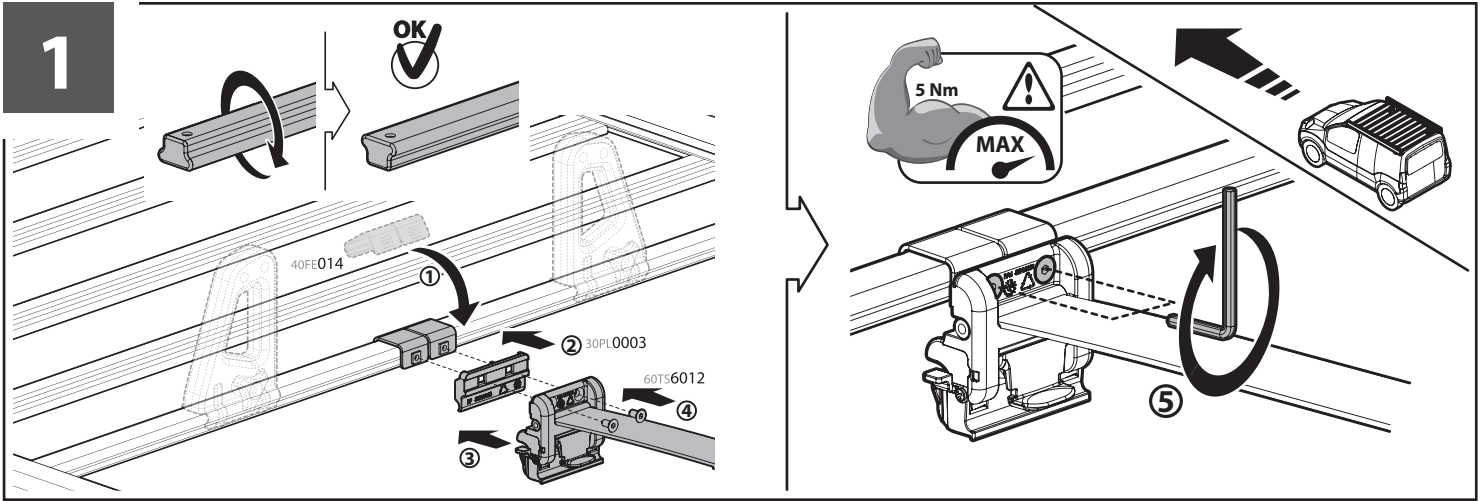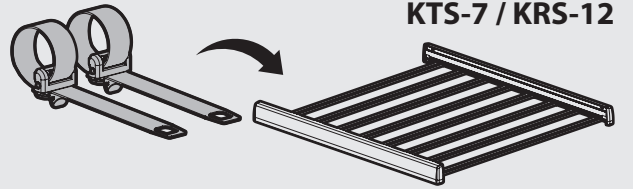

**FIT 1**

**OBBLIGATORIO - COMPULSORY**  
OBLIGATOIRE - VORGESCHRIEBEN - OBLIGATORIO


**LOAD STOP**

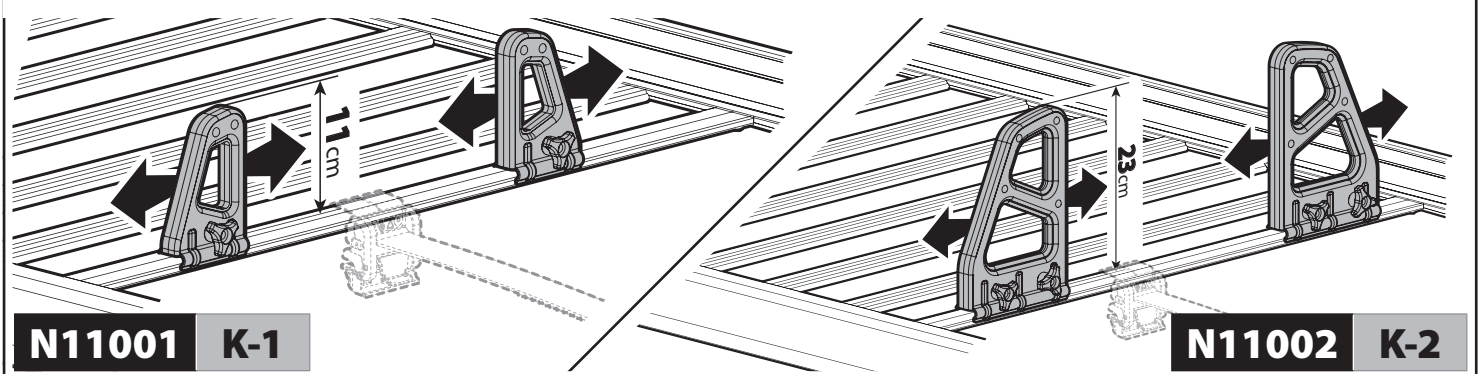

**FIT 2**





**OBBLIGATORIO - COMPULSORY**  
OBLIGATOIRE - VORGESCHRIEBEN - OBLIGATORIO




**LADDER STEP ADAPTER**

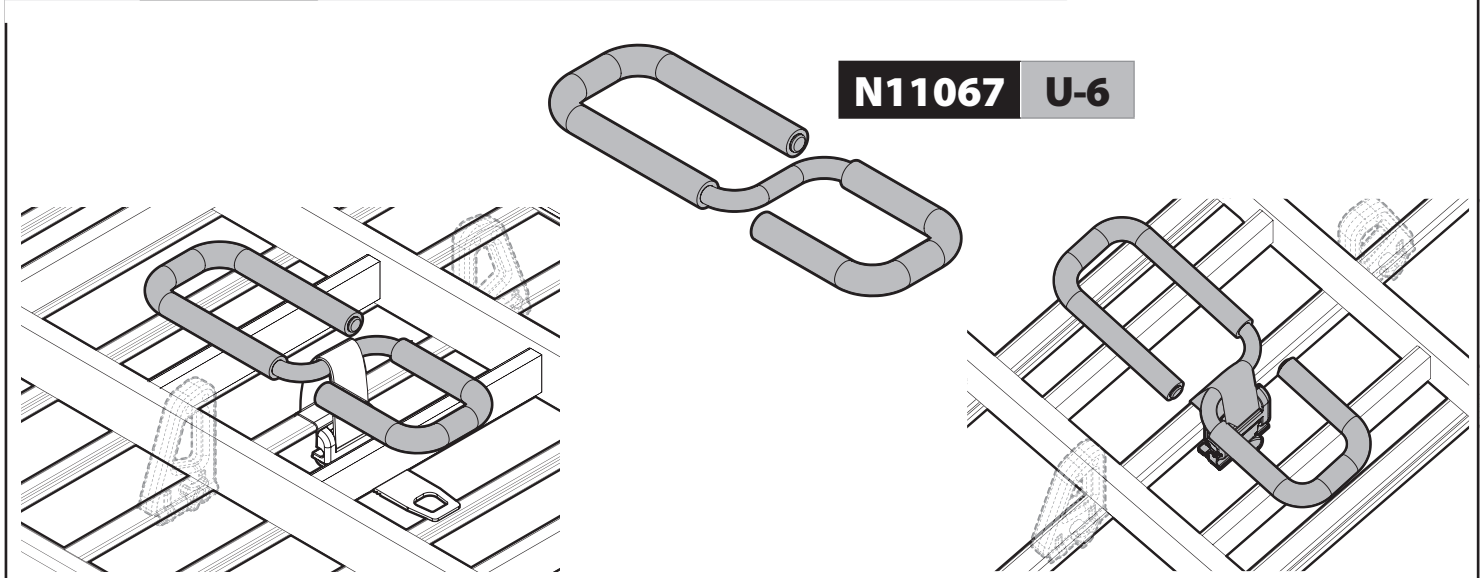





- ① TENDERE LA CINGHIA
- GB TIGHTEN THE BELT
- F SERRER LA CEINTURE
- D ZIEHEN SIE DEN GURT
- E AJUSTE LA CORREA

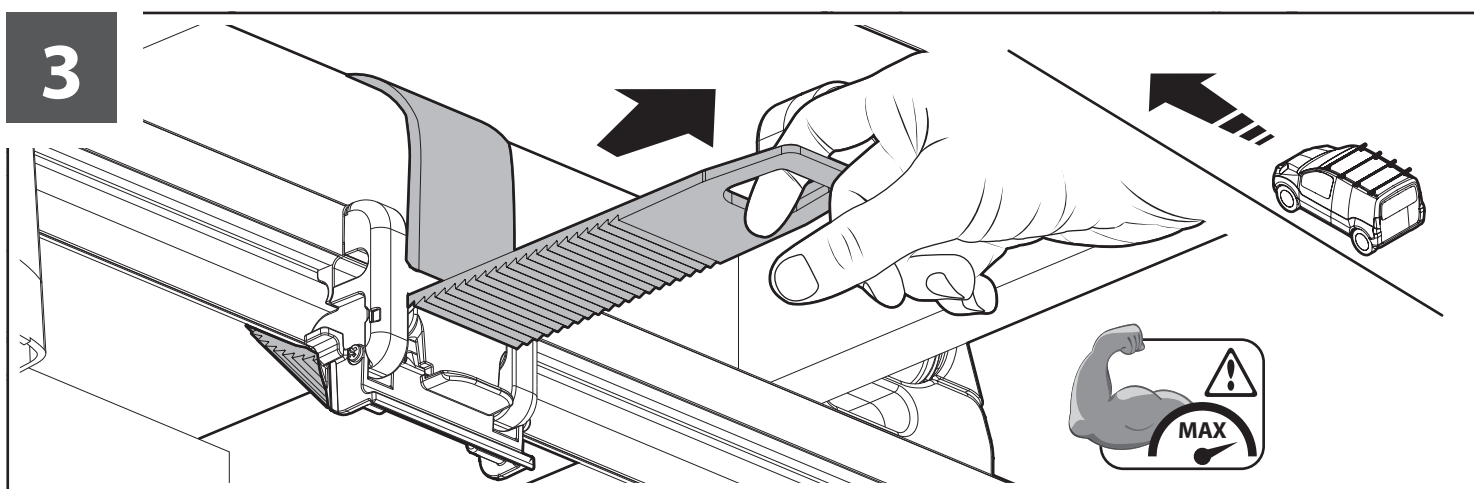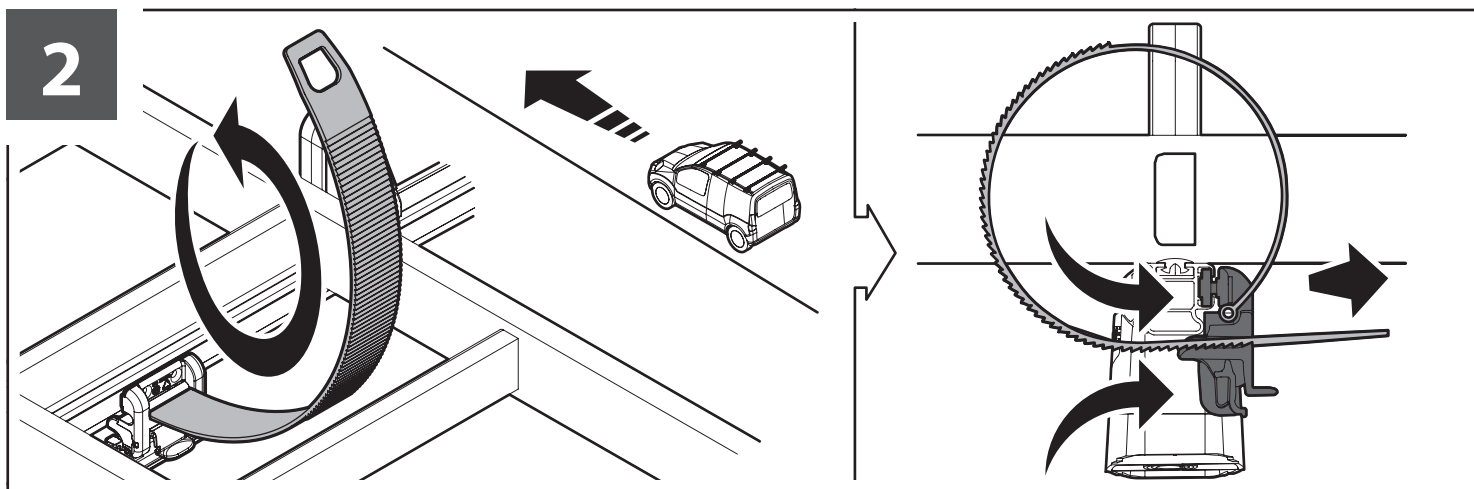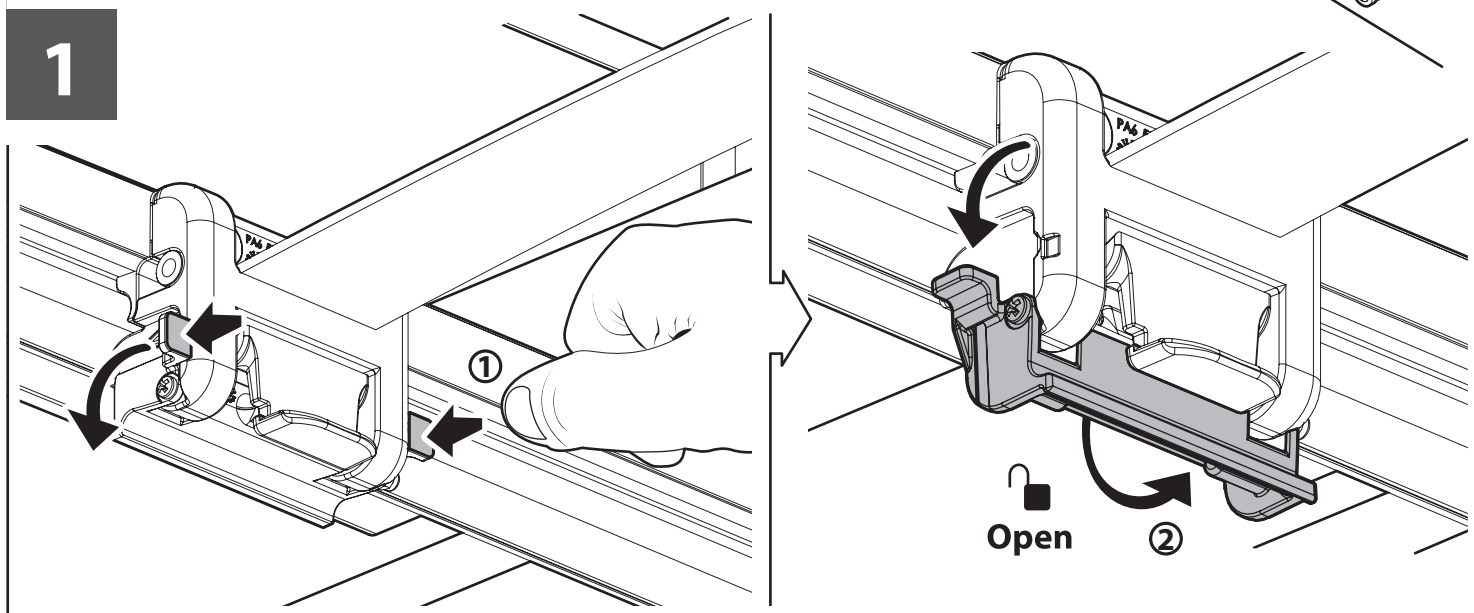
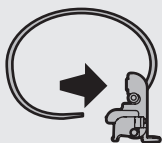


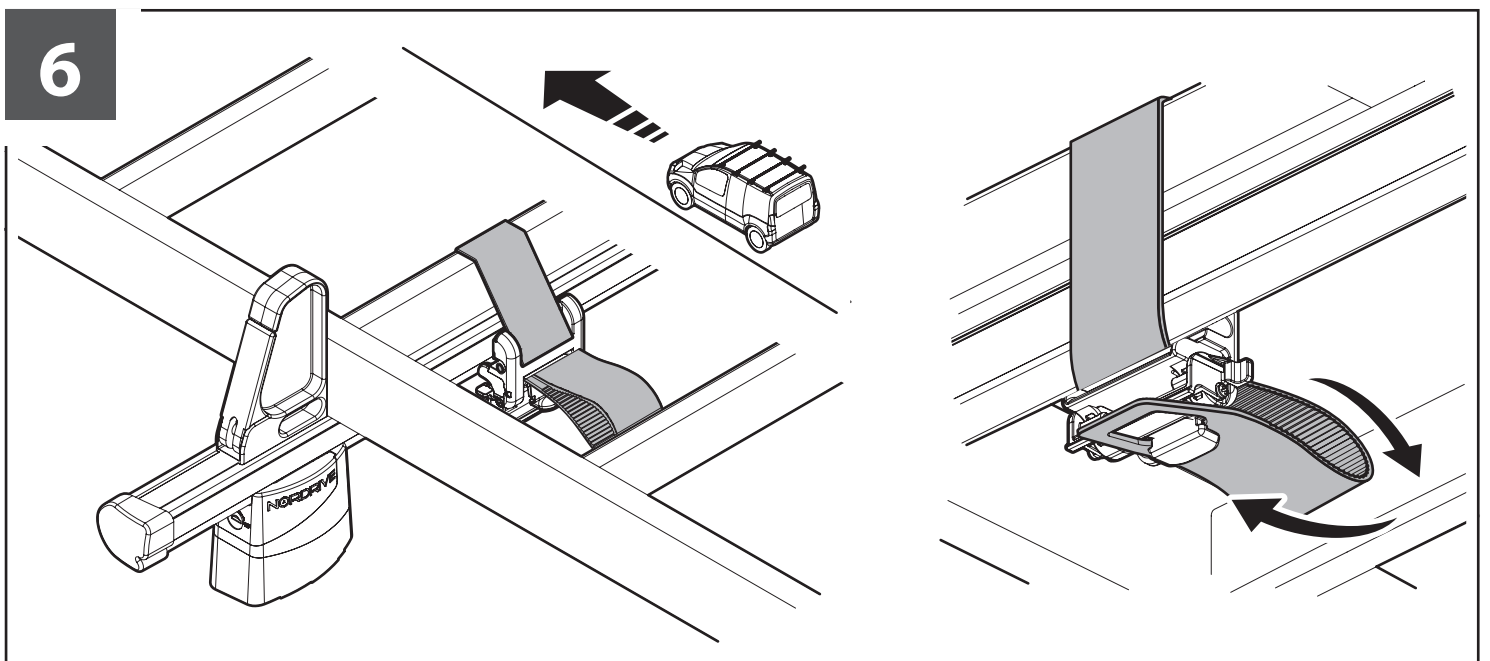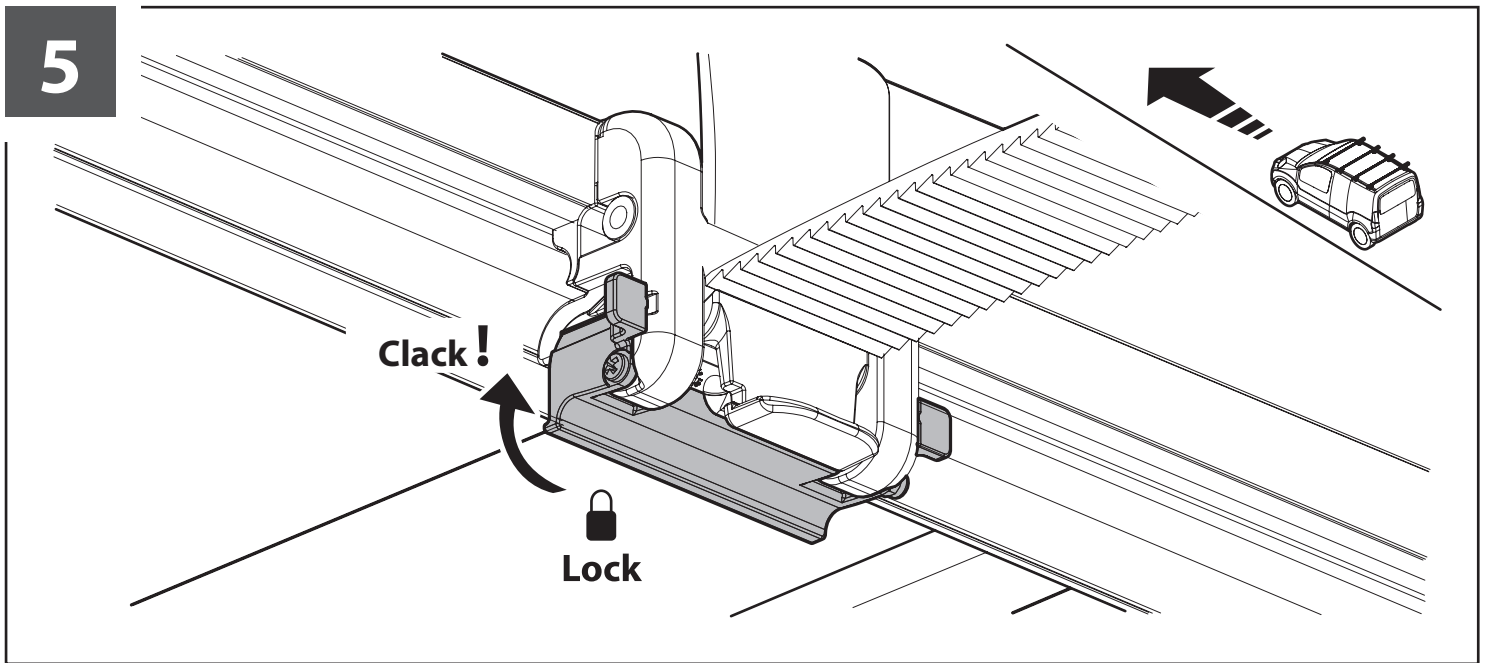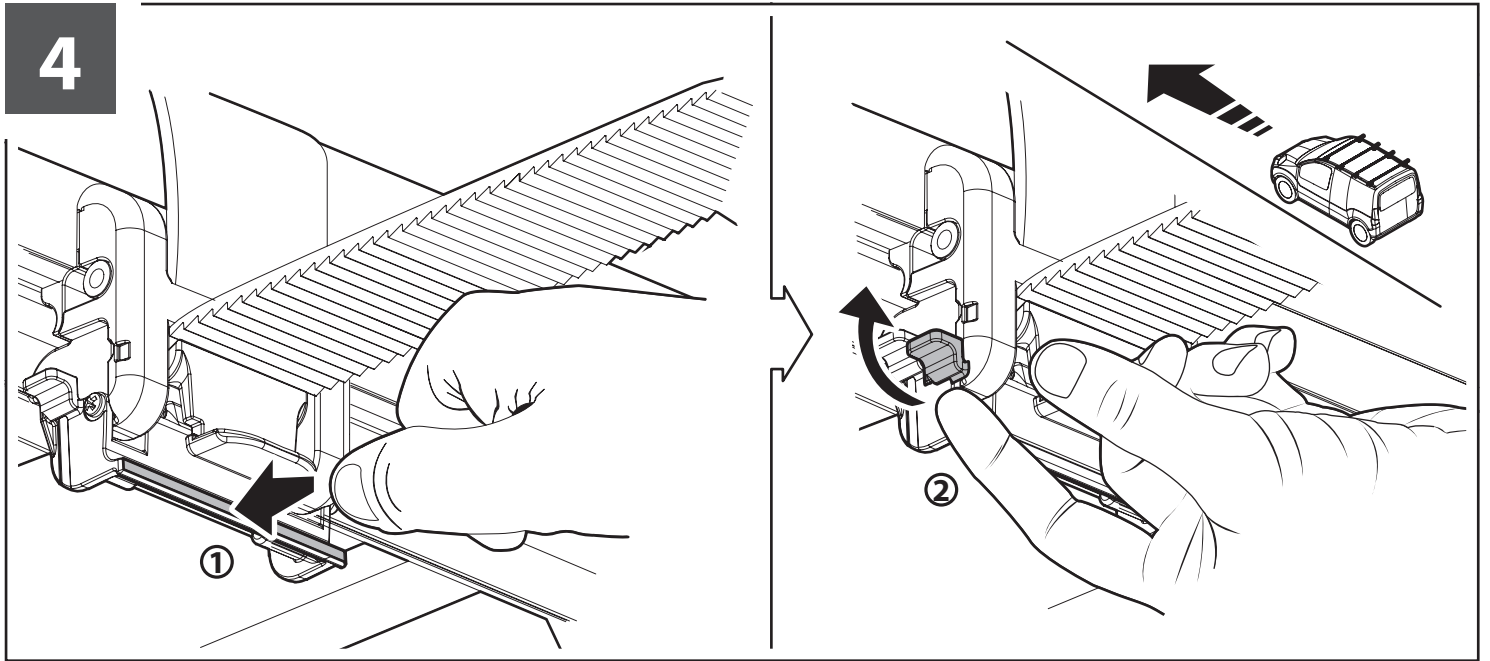


- ⓘ ALLENTARE LA CINGHIA
- ⒼⒹ LOOSEN THE BELT
- Ⓕ DESERRER LA CEINTURE
- Ⓓ LOCKERN SIE DEN GURT
- Ⓔ AFLOJAR LA CORREA

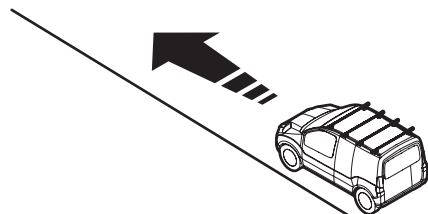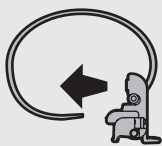

**1**

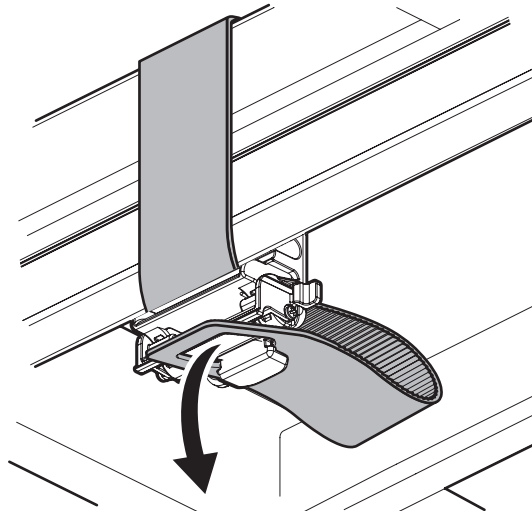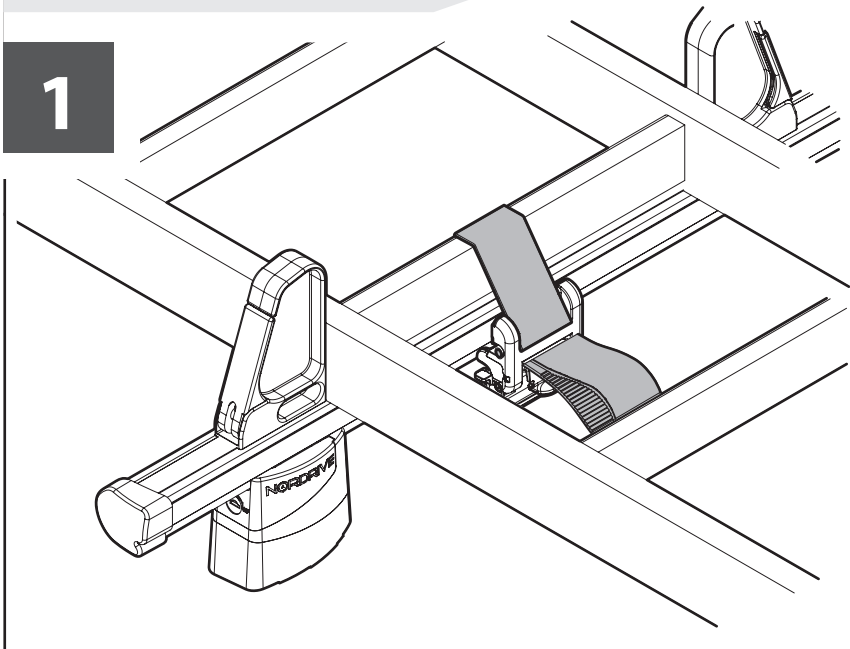

**2**

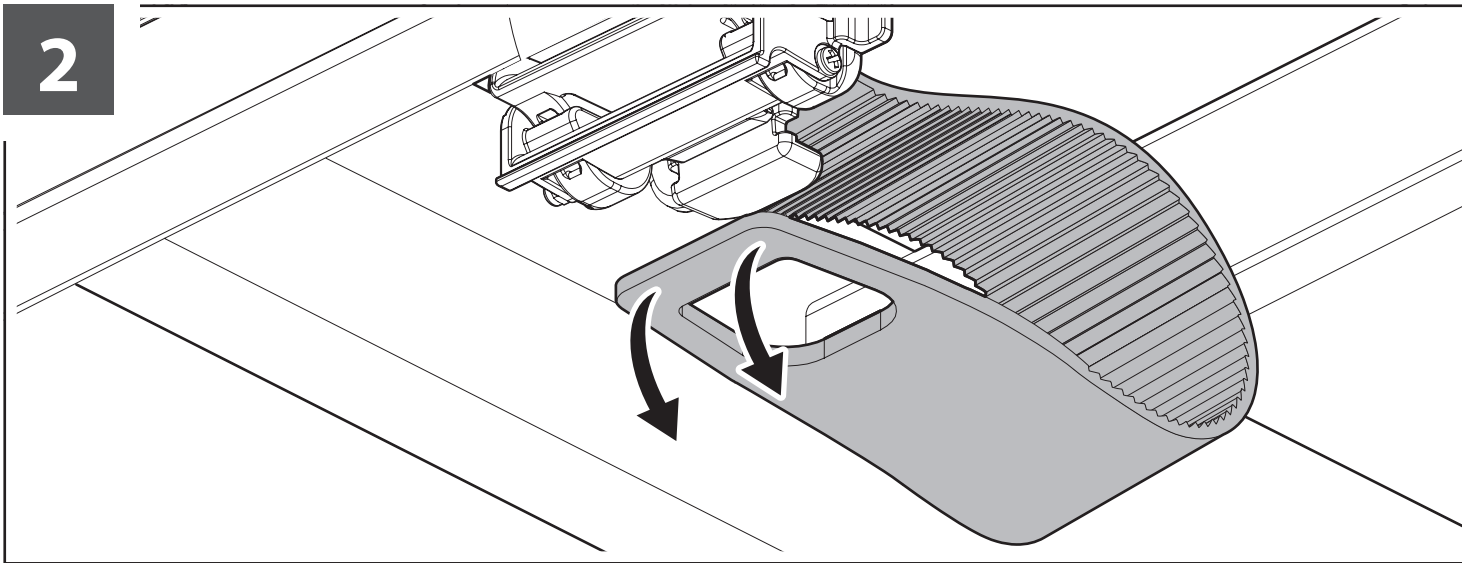

**3**

